



Installation instructions for the MS backdraught damper


The MS backdraught damper is designed for installation in round ventilation systems and in ducts discharging air from kitchen hoods in multi-family buildings.

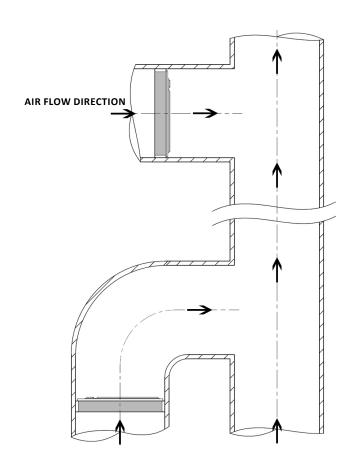



Insert the damper in the ventilation pipe. The circumferential seal must fit tightly to the duct. Horizontal and vertical installation possible. It is necessary to pay attention to the correct air flow direction.




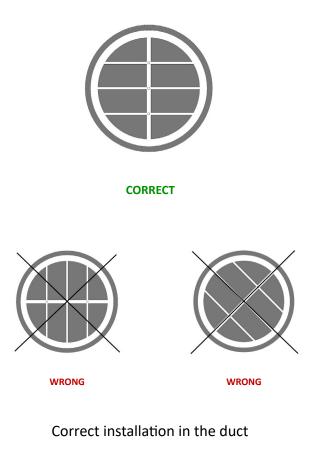

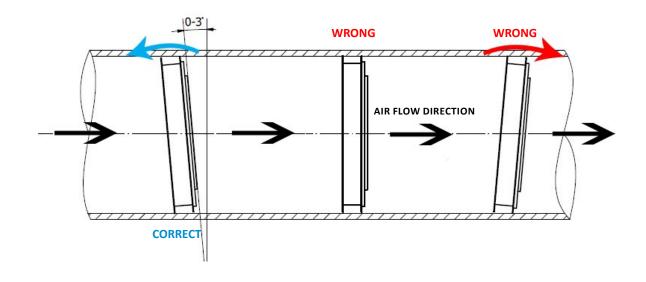

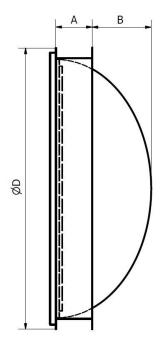

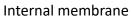

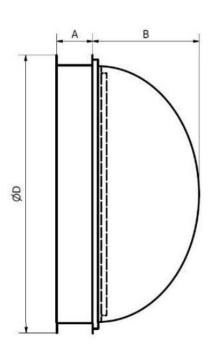

External membrane

Dimensions

| | | internal membrane | | external membrane | |
|--------|-----|----------------------|----|----------------------|----|
| Туре | ØD | Α | В | Α | В |
| MS.100 | 100 | 18 | 16 | 21 | 35 |
| MS.125 | 125 | 18 | 26 | 21 | 45 |
| MS.160 | 160 | 21 | 36 | 26 | 55 |

